

This chart is used to determine the size of hose needed to fill flow rate and velocity requirements.

Place a straightedge along a line from the flow rate column to the velocity column. The recommended hose size is shown at the point where the line crosses the Hose I.D. column. If the line crosses the Hose I.D. column between sizes, use the next larger I.D.

In the illustration, a 5/8" hose is recommended for a 10 gpm flow rate at a 10fps velocity.

NOTE: Unless flow of hydraulic fluid is intermittent or occasional, recommended velocities should not be exceeded.

